


Precision Weighing Solutions

Escali™

User Manual

Plena Digital Kitchen Scale

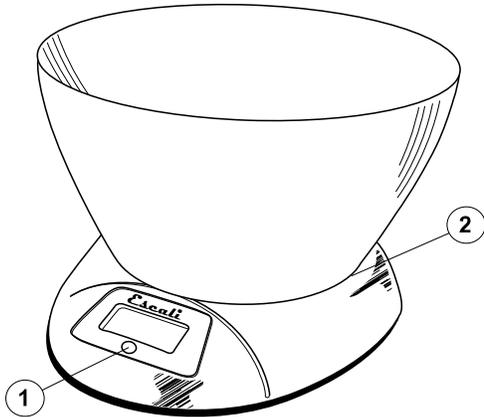

- 1) All feature operating button
- 2) Weighing platform

www.Escali.com

Turning off your scale:

Your scale will automatically turn off after 2 minutes of non-use. You can also manually turn off the scale by holding the Operating button down for approximately 3 seconds.

Changing the Weighing Mode:

Your scale can weigh in grams, ounces, Pounds/Ounces or Kilograms/grams. The factory default is set to grams. You can simply change the weighing mode before you operate the scale.

- 1) Turn the scale on.
- 2) Immediately press the Operating button once, or multiple times, until the desired weighing mode is displayed.
- 3) Your scale will keep the last used weighing mode in memory, and will return automatically to this mode when you turn the scale on.

Do not place overweight items on the scale

Weighing items over the maximum weight capacity will cause an overload "O-L.d" error to display. Immediately remove overweight items to avoid causing damage to your scale.

Power Source: two 3-volt lithium batteries

Dimensions: 8.75" x 7.25" x 1.5" (22.5cm x 18.5cm x 4cm)

Increments: 0.1oz (1/10th oz) & 1 (one gram)

Capacity: 13 Lb / 6 Kg

Bowl Capacity: 2.5 Liter / 85 Fl. Oz.

Weight Modes: grams, ounces, Kg/gm, and lb./oz.

Auto Shut Off: Turns off after 2 minutes of non-use.

Warranty: Manufacturer's five (5) year warranty, see www.escali.com for full details.

Thank you for purchasing an *Escali* Digital Scale.

Please read the following operation information to ensure the proper function of your new scale.

Before use

Your scale is equipped with one easy to use all feature operating button. This button is located on the front of the scale, just below the display. With this button, you control all features; On, Off, Tare and Weighing Mode (g / kg / lb oz / oz).

How to weigh:

- 1) Turn the scale on. All display segments will appear for approximately 2 seconds before resetting to zero.
- 2) Your scale will keep the last used weighing mode in memory, and will return automatically to this mode when you turn the scale on.
- 3) Place item slowly on the platform.

How to use the "Tare" feature:

This feature allows the display to be reset to zero after you weigh an item in the bowl. It shows the weight of additional items as if you were to weigh them separately.

- 1) Turn the scale on with the bowl on the platform.
- 2) Put an item in the bowl. The display will show its weight.
- 3) Press the Operating button again. Wait 2 seconds, the weight of the bowl with item will be removed and the display will reset to "0.0".
- 4) Slowly add another item to the bowl. The display will show the weight of the new item only.
- 5) Repeat step 3 and 4 when adding more items to the bowl.

How to clear the "Tare" feature:

- 1) Remove all items from the platform.
- 2) Press the Operating button once. Wait 2 seconds. Now the scale is reset to "0.0" and the weight of all items on the platform will be displayed.

Additional Information

- 1) Make sure your scale is at room temperature and on a stable horizontal surface free of vibration.
- 2) This scale is not waterproof. Do not expose to moisture.
- 3) As this scale is a precision instrument, it must be handled with extreme care. Avoid rough treatment, shaking and vibration.
- 4) Do not disassemble this scale or the warranty will be void.
- 5) The display value may be affected by electromagnetic disturbances such as operating near a radio. If this occurs, move the device that is causing the disturbance and turn the scale off and restart.

Battery Replacement/Installation:

Replace the batteries when the LCD display reads "LO".

- 1) Remove the battery door.
- 2) Install two new 3-volt lithium batteries.
- 3) Replace the battery door.

Escali's liability is limited to two (2) times the cost of the product

© Copyright Escali LLC, 2003